



# TA 4040

Håltagningsmått för ovanliggande montage och planmontage


Asennusaukon mittakuva upotukselle sekä huullosasennukselle

Plass størrelse for ovenfor montering og flat montering

Hole measurements for top and flush mount

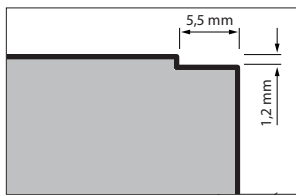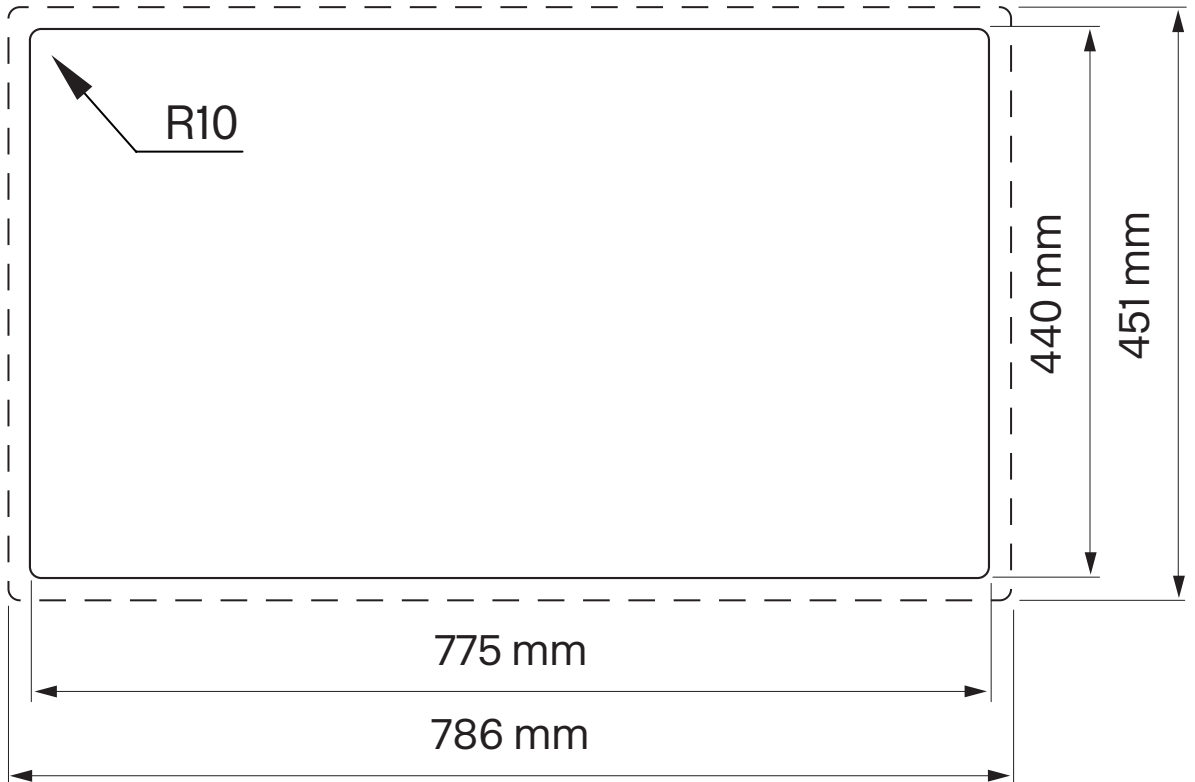

- Håltagning bänkskiva ovanliggande montage/planmontage  
Prege benk øvre monterings/plan montering  
Asennusaukko upotukseen  
Countertop cut out for top mount/flush mount
- - - - - Urfräsning vid planmontage (5,5 mm bred, 1,2 mm djup)  
Utgravingen av festeplanet (5,5 mm brede, 1,2 mm dype)  
Huullosasennuksen tason jyrshintä (5.5mm leveä, 1.2mm syvä)  
Recess for flush mount (5.5 mm wide, 1.2 mm deep)

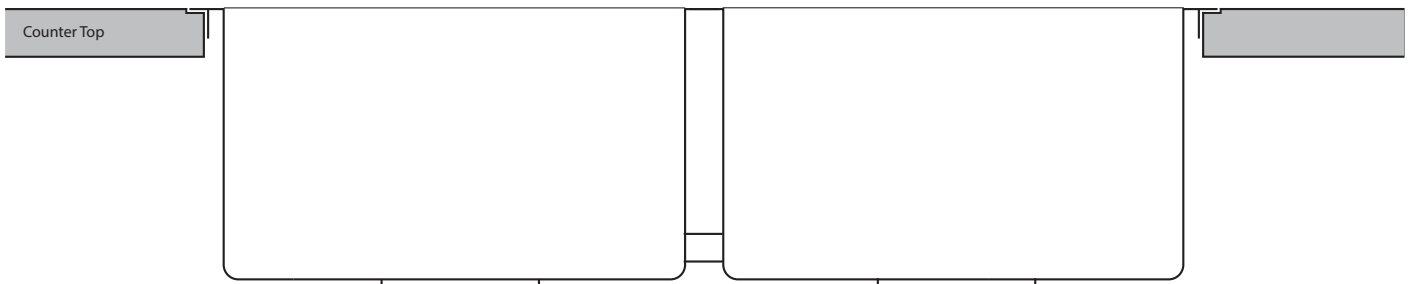

Tapwell



# TA 4040

Håltagningsmått för  
undermontage (underlimning)

Asennusaukon mittakuva  
alta-asennukselle (altaliimaus)

Plass størrelsen av  
sammenstillingen (ved liming)

Hole measurements  
for under mount

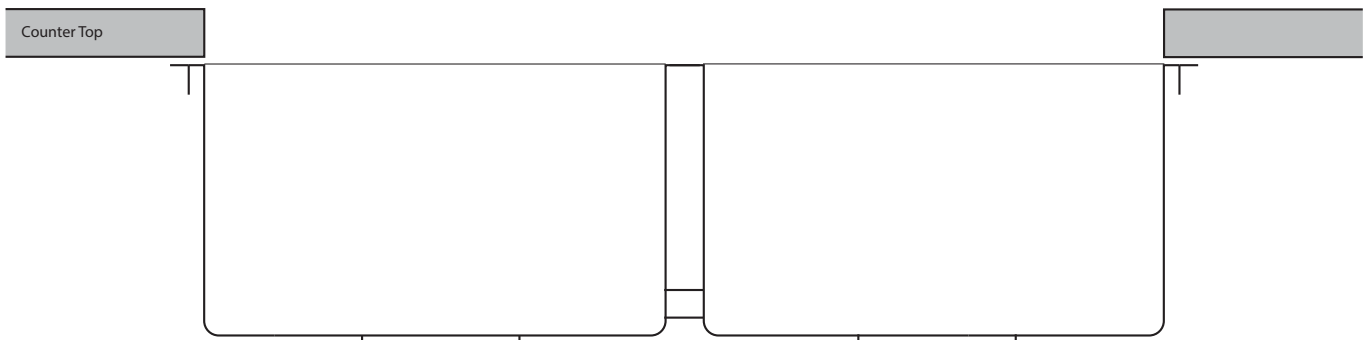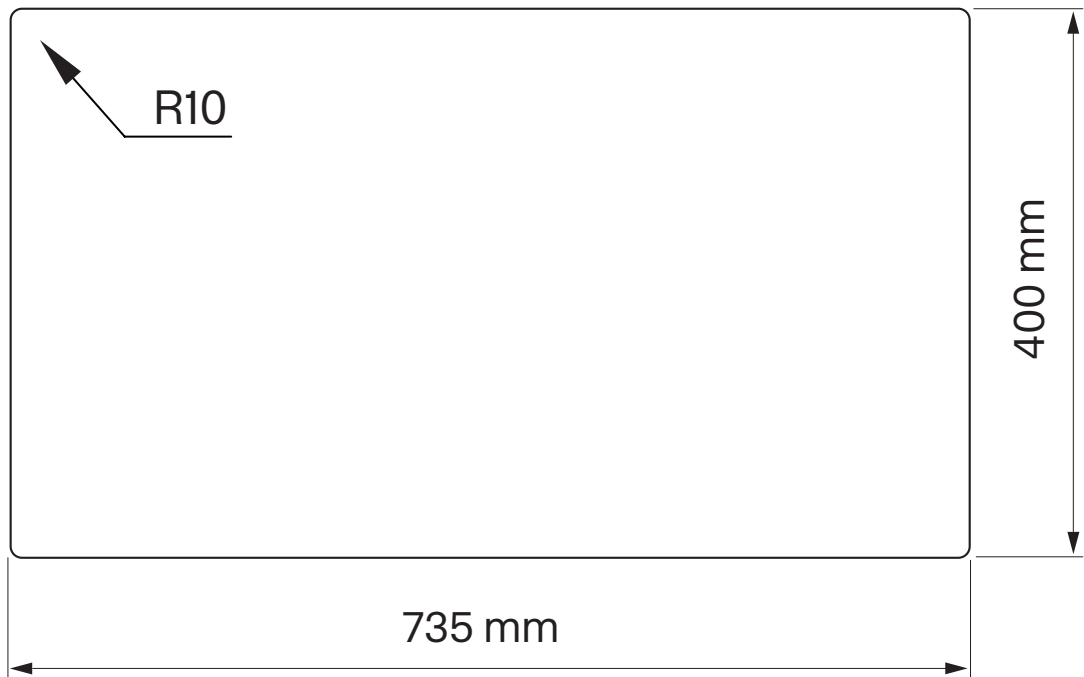

Tapwell