# CA071 Washbasin mixer

CA071 Chrome

### **Article Number**

CA071 Chrome - 4229738 CA071 Matte Black - 9423648 CA071 Polished Brass - 9424433 CA071 Copper - 9424436 CA071 Bronze - 9426049 CA071 Black Chrome - 9424437 CA071 Honey Gold - 9424438 CA071 Brushed Black Chrome - 9424439 CA071 Brushed Nickel - 9424440

Basin faucet. To be combined with pop up waste.  $\rightarrow$ 

Our wash basin taps combines advanced technology, exquisite design, and top-notch performance to offer you the ultimate bathroom upgrade. With its sleek and modern appearance, it effortlessly enhances the visual appeal of your wash basin, becoming a focal point that exudes elegance and sophistication in a range of different finishes.



#### Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners.

Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Copper also gets patina but should not be polished. The other shiny surfaces retain their luster.

#### Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

#### Lubrication

Lubricate only with silicone grease.

#### Maintenance

Visit our YouTube channel  $\rightarrow$  where there are instructional videos for changing the ceramic cartridge, changing aerators and more.


### **Specifications**

Connection inlet: Flexible hose with 3/8" nut Number of grips: One grip Number of outgoing connections: 1 Dimension inlet: 10 mm alt. 3/8" Length protrusion outlet head: 110 mm Max flow: 0,28


### **Dimensions/Weight**

Package - Depth: 430 mm Package - Width: 210 mm Package - Height: 80 mm Package - Weight: 1,60 kg Package - Volume: 0,01 m<sup>3</sup> Building height underneath outlet: 96 mm Product - Width: 50 mm Product - Depth: 148 mm Product - Height: 147 mm Total building height: 147 mm

## Tapwell Drawing - PDF

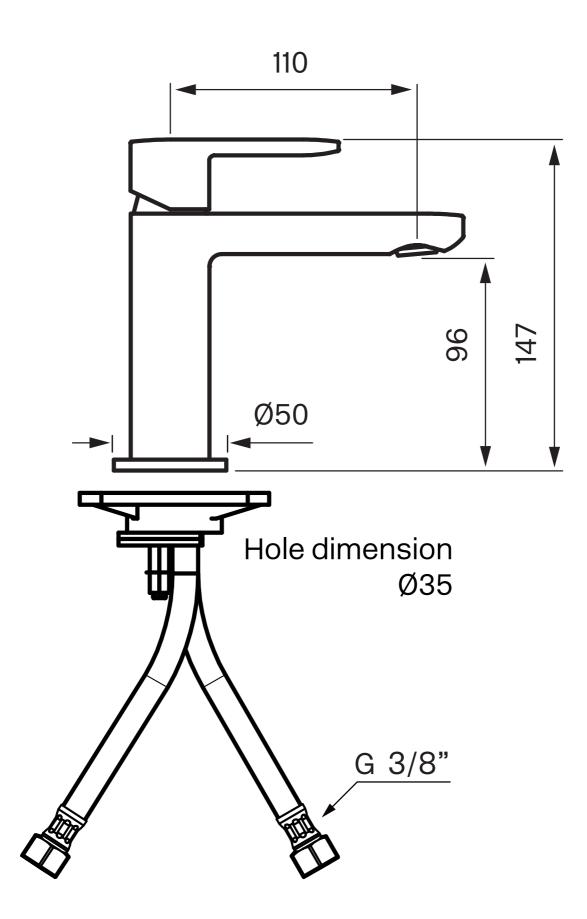

### Tapwell Exploded View

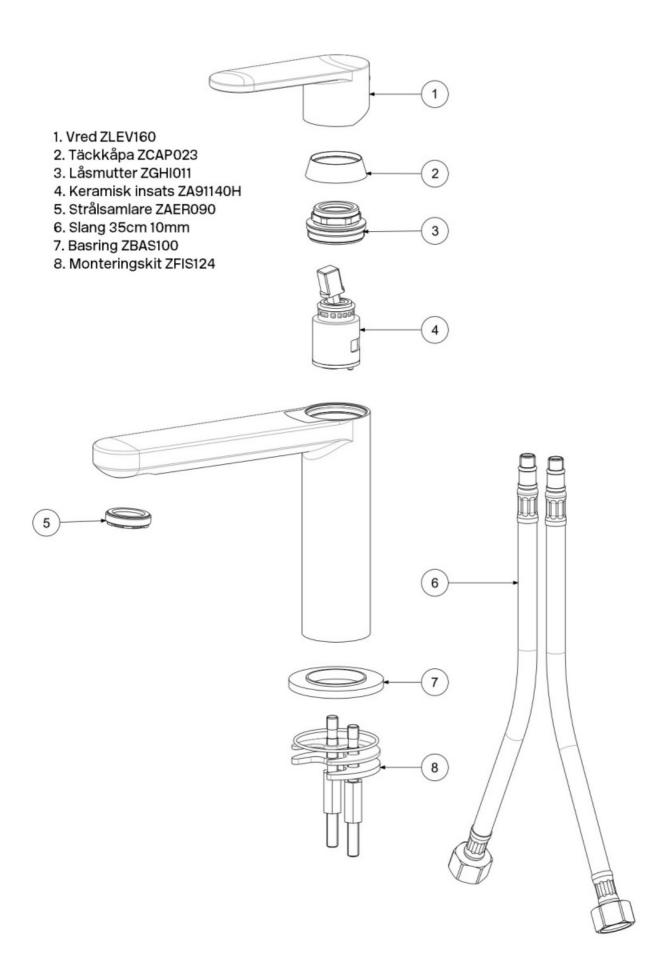


### Replace ceramic insert

The ceramic disc needs to be replaced if the outlet spout or the water flow and temperature adjuster lever drip.

### Article description:

- 1. Faucet body
- 2. Ceramic cartridge
- 3. Locking nut for the ceramic cartridge
- 4. Cover cap
- 5. Lever handle
- 6. Locking screw for the lever handle
- 7. Cover plug

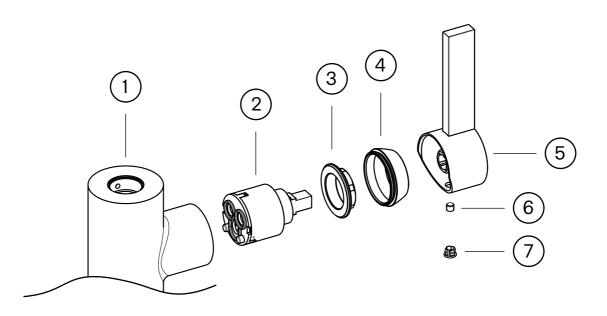

### Working order:

### NOTE - the water to the main line must be turned off!

1. The water to the mixer (1) is turned off and the mixer opened to drain off the water.

2. Pry off the cover plug.

3. The locking screw (6) that holds the lever handle (5) is loosened about 1 turn using an Allen key (2,5 mm alt. 3 mm) and the lever handle is removed by hand.

4. The cover cap (4) is unscrewed by hand.


5. The locking nut (3) for the ceramic cartridge (2) is unscrewed with a fixed wrench.6. The ceramic cartridge (5) is pulled out by hand and the cartridge seating in the mixer

housing is then carefully cleaned of any particles and limescale. Rinse the mixer.

7. Put the new cartridge in place. During assembly, the cartridge must be turned to the position where the guide pins in the bottom are secured in the corresponding outlets in the bottom of the mixer housing.

8. Reassemble in the reverse order.

### Flowcart

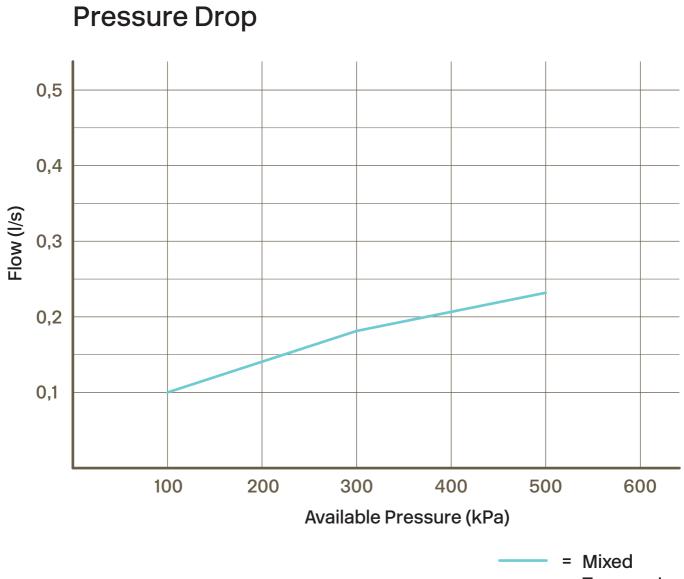

Temperature