VIC071 Washbasin mixer

VIC071 Chrome

Article Number

VIC071 Chrome - 9423494

VIC071 Matte Black - 9424392

VIC071 Polished Brass - 9424393

VIC071 Copper - 9424394


VIC071 Bronze - 9426085

NO_VIC071 Black Chrome - 9424534

VIC071 Honey Gold - 9424396

VIC071 Brushed Black Chrome - 9424397

VIC071 Brushed Nickel - 9424398

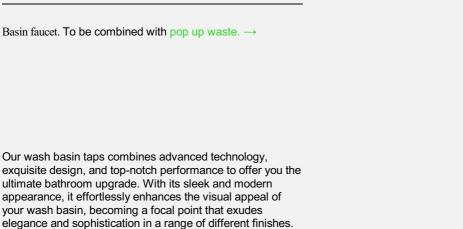



Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners.

Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Copper also gets patina but should not be polished. The other shiny surfaces retain their luster.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.

Maintenance

Visit our YouTube channel \rightarrow where there are instructional videos for changing the ceramic cartridge, changing aerators and more.

Specifications

Connection inlet: Flexible hose with 3/8" nut

Number of grips: One grip

Number of outgoing connections: 1 Dimension inlet: 10 mm alt. 3/8" Length protrusion outlet head: 104 mm

Classification energy: B


Dimensions/Weight

Package - Depth: 420 mm Package - Width: 180 mm Package - Height: 70 mm Package - Weight: 1,50 kg Package - Volume: 0,01 m³


Building height underneath outlet: 92 mm

Product - Width: 45 mm Product - Depth: 130 mm Product - Height: 163 mm Total building height: 163 mm

Drawing - PDF

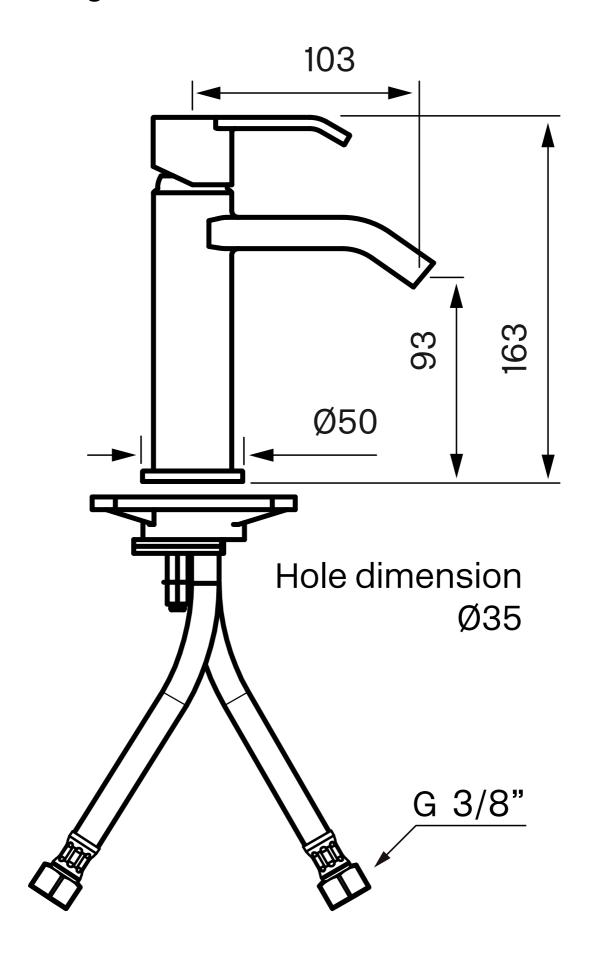

Exploded View

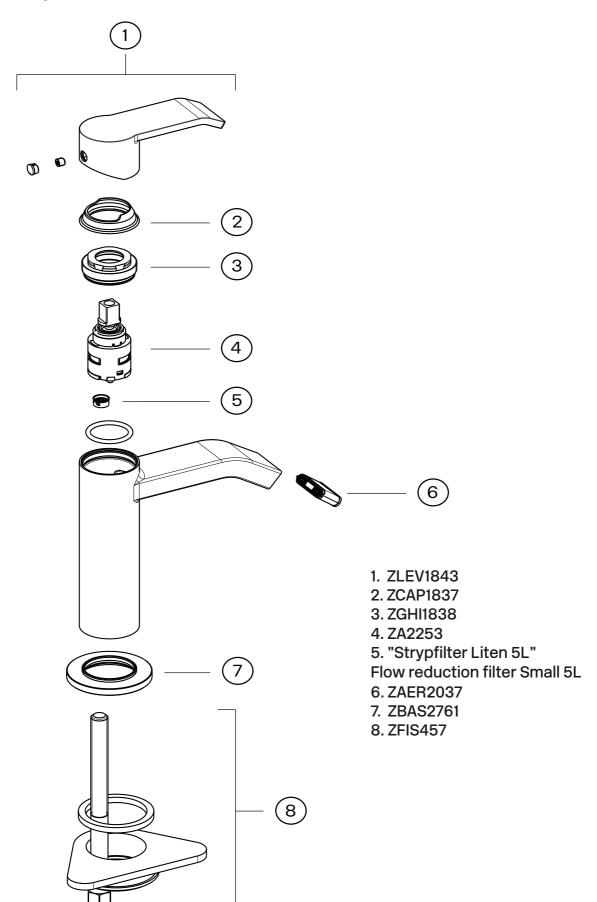


Replace ceramic insert

The ceramic disc needs to be replaced if the outlet spout or the water flow and temperature adjuster lever drip.

Article description:

- 1. Faucet body
- 2. Ceramic cartridge
- 3. Locking nut for the ceramic cartridge
- 4. Cover cap
- 5. Lever handle
- 6. Locking screw for the lever handle
- 7. Cover plug

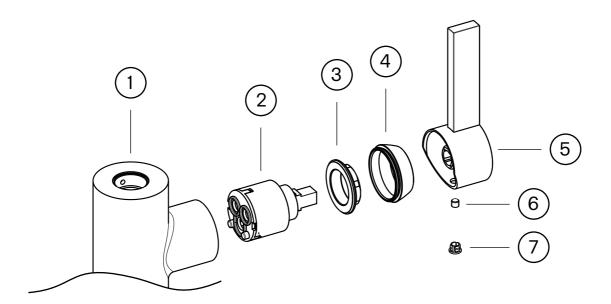

Working order:


NOTE - the water to the main line must be turned off!

- 1. The water to the mixer (1) is turned off and the mixer opened to drain off the water.
- 2. Pry off the cover plug.
- 3. The locking screw (6) that holds the lever handle (5) is loosened about 1 turn using an Allen key (2,5 mm alt. 3 mm) and the lever handle is removed by hand.
- 4. The cover cap (4) is unscrewed by hand.
- 5. The locking nut (3) for the ceramic cartridge (2) is unscrewed with a fixed wrench.
- 6. The ceramic cartridge (5) is pulled out by hand and the cartridge seating in the mixer housing is then carefully cleaned of any particles and limescale. Rinse the mixer.
- 7. Put the new cartridge in place. During assembly, the cartridge must be turned to the position where the guide pins in the bottom are secured in the corresponding outlets in the bottom of the mixer housing.
- 8. Reassemble in the reverse order.

Flowcart

FLOWCHART

VIC071

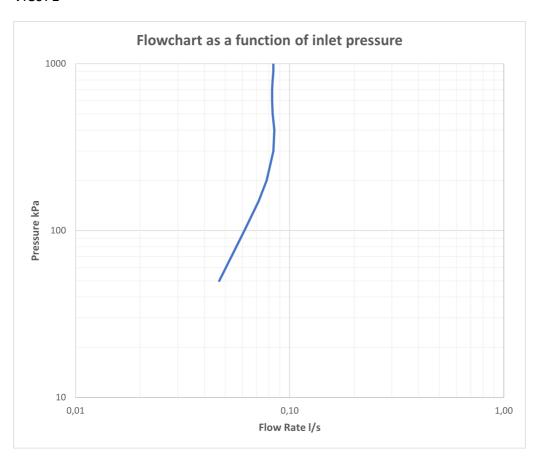

DATA

| Pressure (kPa) | Flow lit/min | Flow lit/s |
|----------------|--------------|------------|
| 50 | 2,8 | 0,05 |
| 100 | 3,7 | 0,06 |
| 150 | 4,3 | 0,07 |
| 200 | 4,7 | 0,08 |
| 300 | 5,0 | 0,08 |
| 400 | 5,1 | 0,08 |
| 500 | 5,0 | 0,08 |
| 600 | 5,0 | 0,08 |
| 700 | 5,0 | 0,08 |
| 800 | 5,0 | 0,08 |
| 900 | 5,0 | 0,08 |
| 1000 | 5,0 | 0,08 |