


Tapwell

Product Sheet

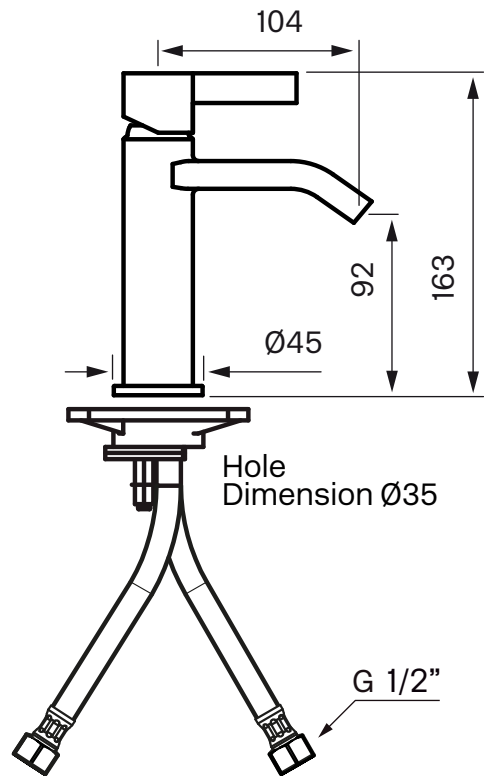

ARM 071

Wash basin

Art. nr:

Chrome **9420839**

Brass **9420839**

Copper **9421095**

Honey Gold **9421096**

Black Chrome **9421099**

Rose Gold **9421098**

White Gold **9421097**

Matte Black **9421101**

Brushed Nickel **9421100**

Ceramic cartridge: ZA2253

Aerator: ZAER2037

Cleaning

Wipe the surface with a soft cloth and luke-warm water and possibly a mild soap. The surface withstands no basic, acidic, lime dissolving or abrasive detergents.

Decalcification

Aerators shall regularly be decalcified by water and vinegar mix for a few hours.

Lubrication


Lubricate only with silicone grease.

Replacing Cartridge

The ceramic disc needs to be replaced if the outlet spout or the water flow and temperature adjuster lever drip.

Article description:

1. Locking screw for the lever handle
2. Lever handle
3. Cover cap
4. Locking nut for the ceramic cartridge
5. Ceramic cartridge
6. Faucet body

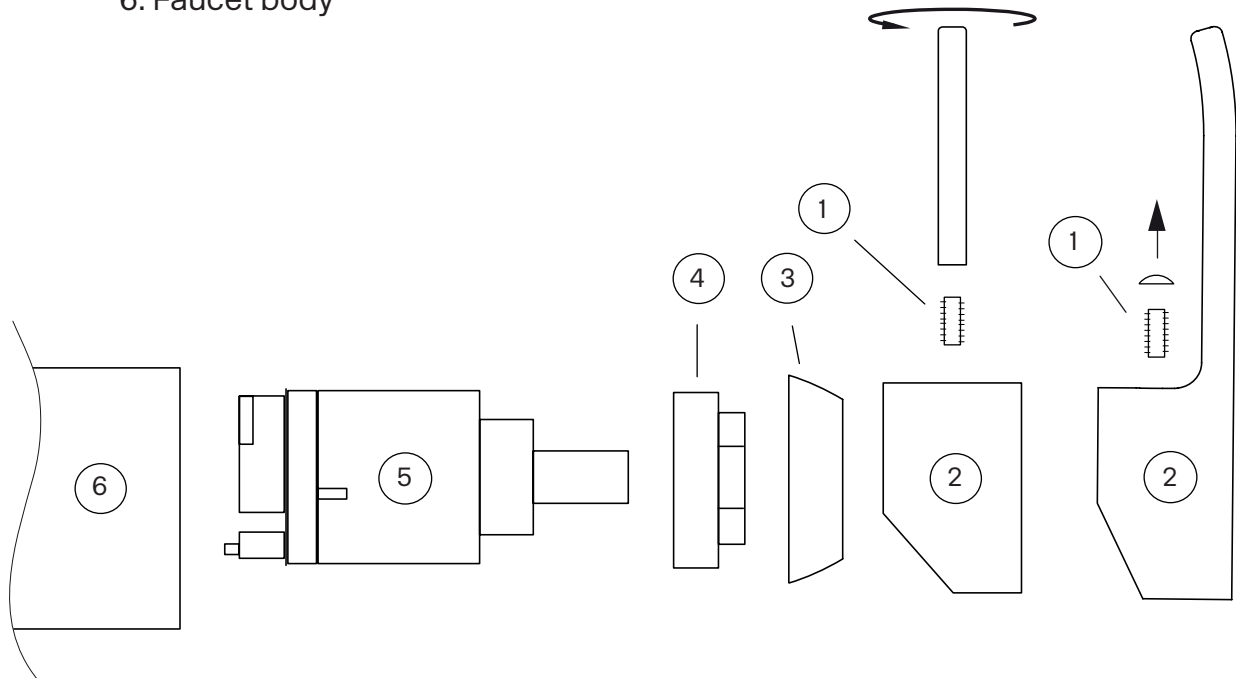


Working order:

NOTE - the water to the main line must be turned off!

1. The water to the mixer (6) is turned off and the mixer opened to drain off the water.
2. Unscrew the lever/pry off the cover plug.
3. The locking screw (1) that holds the lever handle (2) is loosened about 1 turn using a 2.5 mm Allen key and the lever handle is pulled off by hand.
4. The cover cap (3) is unscrewed by hand.
5. The locking nut (4) for the ceramic cartridge (5) is unscrewed with a fixed wrench.
6. The ceramic cartridge (5) is pulled out by hand and the cartridge seating in the mixer housing is then carefully cleaned of any particles and limescale. Rinse the mixer.
7. Put the new cartridge in place. During assembly, the cartridge must be turned to the position where the guide pins in the bottom are secured in the corresponding outlets in the bottom of the mixer housing.
8. Reassemble in the reverse order.

Explosion drawing

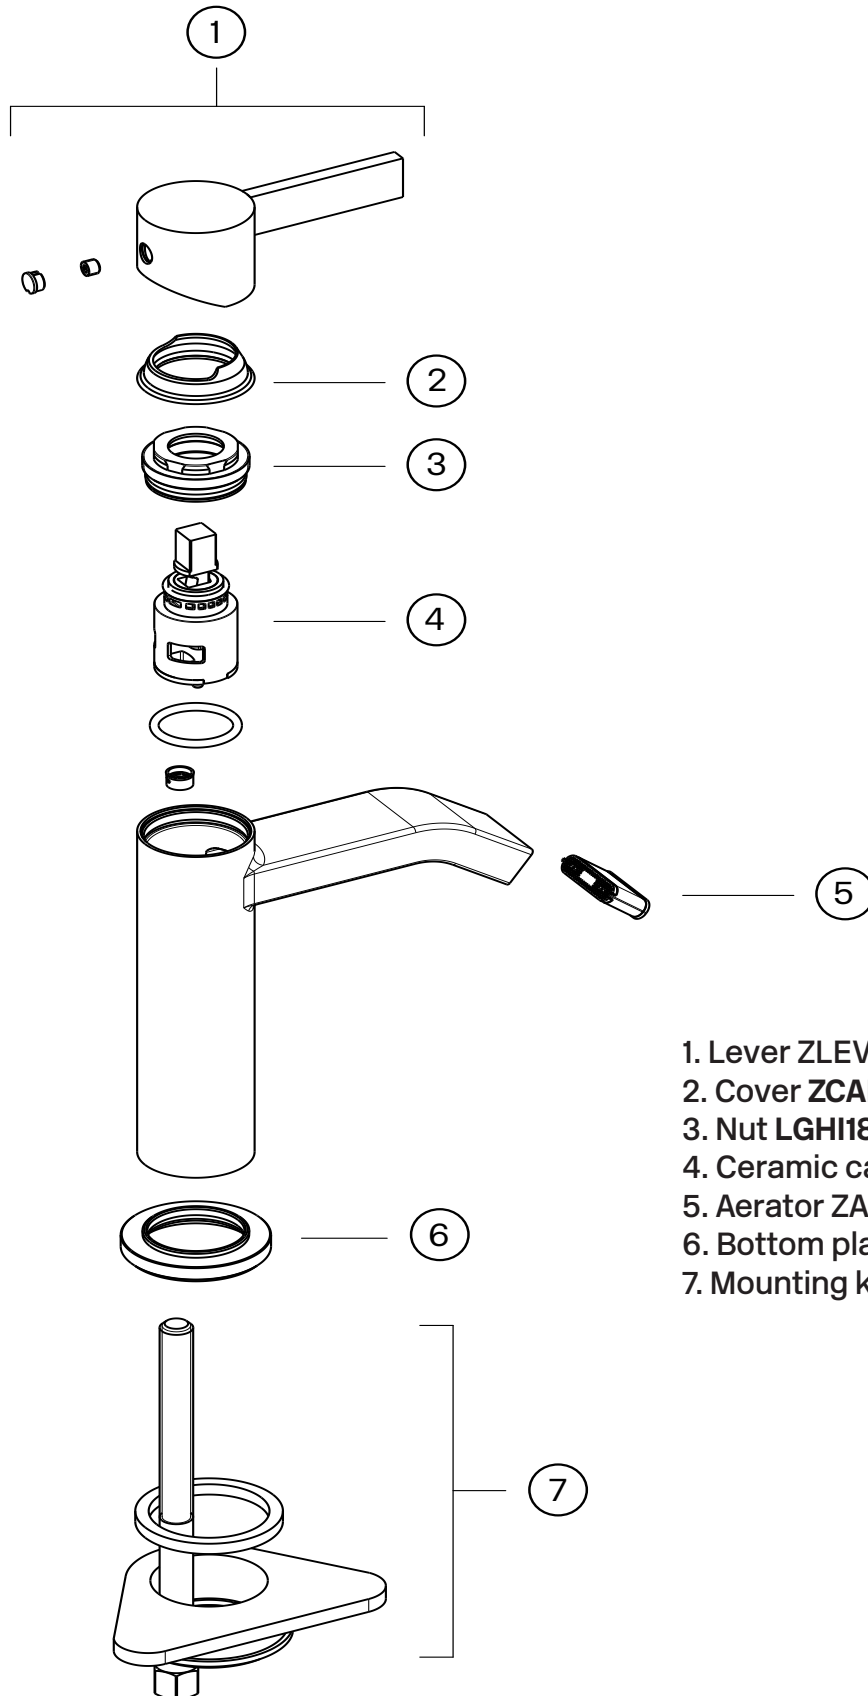

1. Lever ZLEV2683
2. Cover ZCAP1837
3. Nut LGHI1838
4. Ceramic cartridge ZA2253
5. Aerator ZAER2037
6. Bottom plate ZBAS1866
7. Mounting kit ZFIS442

Tapwell

Flow rate

ARM 071

